



## DE'LONGHI INT/A/RU/SKA EC200CD.B EX:C 0132151043

Pos.	Spare part code	Description
	5313270059	HEATING ELEMENT SEAL
001	5332218100	COVER
002	5332107900	MEASURING SPOON
003	5532109300	KNOB
004	5332218000	COVER
006	5118100800	WARNING LIGHT
007	5932105800	CONTROL PANEL
008	611905	SPRING
009	5532107500	KNOB
010	ES000	*NOT AVAILABLE
011	511816	FUSE
013	5132102200	Change Over Switch
014	7332139500	TAP
015	5232101300	THERMOSTAT 125°
016	5232100600	THERMOSTAT 105°
017	536281	TUBE
018	6032103100	BOILER UPPER
019	533216	GASKET
020	5132109900	HEATING Element
022	7313270749	BOILER LOWER
023	6032107100	DIFFUSER
024	5332140900	GASKET
025	7313270759	SUPPORT
030	7032103600	CONNECTION
031	6132101300	SPRING
032	536369	GASKET
033	VT205651	FILTER
034	5332122800	TUBE

**DE'LONGHI INT/A/RU/SKA EC200CD.B EX:C 0132151043**

<b>Pos.</b>	<b>Spare part code</b>	<b>Description</b>
035	534848	SUPPORT
036	5132106900	PUMP
037	5532146000	TUBE
038	7332128100	VALVE
039	5332120300	HINGE
040	536321	TUBE
041	5332125200	TUBE
043	7332160000	TANK
045	5332148400	VALVE
046	621986	RING
047	7032103900	DOWEL
049	6132101600	SPRING
050	5332132800	SUPPORT
051	5332120500	SPACER
052	535733	JOINT
053	5332120200	STOP
054	5332120700	BLOCK
055	535789	FROTHER
056	5332117200	PRESSING DEVICE
057	7032103400	TUBE
058	5332120400	CUP PLATE
059	5332120000	TRAY
060	532233	RUBBER PAD
063	5532113400	BOTTOM
064	9824800009	CLIP CLAMP
065	5532113200	BODY
066	5332108700	GASKET FOR WATER TANK
067	5332109000	PISTON

## DE'LONGHI INT/A/RU/SKA EC200CD.B EX:C 0132151043

Pos.	Spare part code	Description
068	6132100800	SPRING
069	5332111600	O-RING
070	7313279579	SUMP
071	5332123100	RING NUT
072	6032107300	FILTER
073	6032107200	FILTER
074	534714	LEVER
075	7332173800	Large two-cup filter
076	7332173700	Small one-cup or pod filter

Spare parts list extract from the site on 28-10-2011